

BJ7Y4181

借(通)件登记

旧底图总号

底图总号

签名

 
日期

技术要求:

- 1、说明书采用70g白色双胶纸;
- 2、尺寸140x210m。
- 3、符合RoHS环保要求。

标记	处数	分区	更改文件号	签名	年、月、日
设计			会签		
审核			会签		
审核			标准化		
审核			批准		

P45514KW
P4471CKW
说明书
(出口爱尔兰)



BJ7Y4181

阶段标识	重量	比例
------	----	----

1:1

共5张 第1张

安徽康佳同创电器有限公司

PowerPoint

Please read this user's manual thoroughly before using

USER MANUAL

**MODEL: P4471CKW
P45514KW**

**Thank you for choosing this PowerPoint refrigerator.
If cared for correctly you will get many years of use
from your new appliances.**

**Please log on to www.powerpointappliances.ie to
register your 2 year Free Parts & Labour Warranty,
order a spare part or contact our after sales service
department.**

TECHNICAL DATA

MODEL	P4471CKW	P45514KW	P45514SS
Climate Type	N ST	N ST	N ST
Protection Class	I	I	I
Rated Voltage/Frequency	220-240V~ /50Hz	220-240V~ /50Hz	220-240V~ /50Hz
Rated Current	0.5A	0.5A	0.5A
Lamp Rated Power(W)	10W	10W	10W
Energy consumption E ₃₂	0.460 kWh/24h	0.518 kWh/24h	0.518 kWh/24h
Annual Energy Consumption AE	106 kWh/a	127 kWh/a	127 kWh/a
Energy Efficiency Class	F	F	F
Total Volume	87L	229L	229L
Fresh Food Compartment Volume	87L	229L	229L
Refrigerant, Mass	R600a , 20g	R600a , 18g	R600a , 18g
Foaming Agent	Cyclopentane	Cyclopentane	Cyclopentane
Net Weight	18 kg	38 kg	38 kg
Overall Dimension (WxDxH)	470x440x840 (mm)	544x530x1445 (mm)	544x530x1445 (mm)

WARNING

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- The appliance must be unplugged after use and before carrying out user maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Please dispose of the refrigerator according to local regulations due to its use of flammable gas and refrigerant.

This appliance is intended to be used in household and similar applications.
WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance

The foaming agent used in Refrigerator-freezer is flammable. Scrapping and recycling of the Refrigerator-freezer shall be handled by specialized companies to prevent hazards to the environment or other dangers from being caused.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- children shall not play with the appliance.
- cleaning and user maintenance shall not be made by children without supervision.
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

For compression-type appliances which use flammable refrigerants, instructions shall include information pertaining to the installation, handling, servicing (IEC 60335-2-24)

- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved

- children shall not play with the appliance

- cleaning and user maintenance shall not be made by children without supervision



Warning; Risk of fire /
flammable materials

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

INSTALLING AND UNPACKING THE REFRIGERATOR

WARNING: Use two or more people to move the refrigerator.
Failure to do so can result in back or other injuries.

- ◇ Remove tape and any labels from your refrigerator before use (except the rating label).
- ◇ To remove any remaining tape or glue, rub the area briskly with your thumb. Tape or glue residue can also easily be removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

- ◇ Do not use sharp instruments, rubbing alcohol, flammable fluids or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator.
- ◇ When moving the refrigerator, do not tilt the refrigerator beyond 45° from its upright position.
- ◇ After you remove all of the packaging materials, clean the inside of your refrigerator before using it.

SPACE REQUIREMENTS

WARNING: Keep flammable materials and vapors away from the refrigerator.

Failure to do so can result in death, explosion, fire or burns.

- ◇ To ensure proper ventilation, allow 200mm of space between the sides of the refrigerator and the walls, 100mm space between the back of the refrigerator and the wall and 300mm space between the top of the refrigerator and the roof or ceiling.
- ◇ If you are installing your refrigerator next to a fixed wall, leave sufficient space on the hinge side to allow for the door to swing open.
- ◇ Never install your refrigerator near a heat source and in direct sunshine.

ELECTRICAL REQUIREMENT

WARNING: DO NOT REMOVE GROUND PRONG.
DO NOT USE AN ADAPTOR.
DO NOT USE AN EXTENSION CORD.

Failure to follow these instructions can result in death, fire or electrical shock.

Before you move your refrigerator to its final location, it is important to make sure you have the proper electrical connection.

Recommended Earthing Method

AC 220-240V 50Hz fuse and properly earthed electrical supply is required. It is recommended that a separate circuit serving only this appliance be provided. Use a receptacle which cannot be turned off with a switch or pull chain. Do not use an extension cord.

NOTE: Before performing any type of installation, cleaning, or removing a light bulb, disconnect the refrigerator from the electrical source. When you are finished, connect the refrigerator to the electrical source and reset the control to the desired setting.

LEVELING

If the refrigerator is not leveled during installation, the doors may not close or seal properly, causing cooling, frost or moisture problems. It is very important for the refrigerator to be level in order to function properly.

To level your refrigerator, you may either turn the level leg clockwise to raise that side of the refrigerator or turn counter – clockwise to lower that side.

USING YOUR REFRIGERATOR

To obtain the best possible results from your refrigerator, it is important that you operate it properly.

Setting the Thermostat Controls

Controls for the refrigerator and freezer are located above the top shelf of the refrigerating compartment. **When you first install your refrigerator, set the thermostat knob at 5.** Give your refrigerator time to cool down completely before adding food. It is best to wait 24 hours before adding food. The thermostat knob controls the temperature. The higher number setting, the longer the compressor will run to keep the temperature colder.

Power Interruptions

If the electricity in your house goes off for a short period, keep both doors closed to help food stay cold and frozen.

If the power will be off for a longer period, remove food and seek alternative storage.

Fresh Food Storage

Wrap or store food in the refrigerator in airtight and moisture – proof containers. This prevents food odor and taste transfer throughout the refrigerator.

◇ Fruit: Wash, let dry and store in refrigerator in plastic bags or crisper.

◇ Leafy vegetables: Remove wrapping and trim or tear off bruised and discolored areas, wash in cold water and drain. Place in a plastic bag or a plastic container and store in the crisper

◇ Fish: Use fresh fish the same day as purchased.

◇ Meat: Store meat in original wrapping as long as it is airtight and moisture – proof.

◇ Leftovers: Cover leftovers with plastic wrap or aluminum foil. Plastic containers with airtight lids can also be used.

MAINTAINING YOUR REFRIGERATOR

To clean your refrigerator:

◇ Unplug it.

◇ Remove all movable parts from inside, such as shelves, crisper, etc.

◇ Use a soft sponge with a mild detergent. Do not use abrasive or harsh cleaners.

◇ Hand wash, rinse and dry all surfaces thoroughly.

◇ Do not use cleaning waxes, concentrated detergents, bleaches or cleaners containing petroleum on plastics and rubber parts.

TROUBLESHOOTING

In case of malfunction, you can solve many common problems easily.

Your refrigerator will not operate... Check if

◇ The power supply cord is unplugged.

◇ The thermostat knob is set at lower setting.

The light does not work... Check if

◇ The power supply cord is unplugged.

◇ A household fuse or circuit breaker has tripped.

◇ The light bulb is loose in the socket.

◇ The light bulb has burned out.

Food in the refrigerator compartment is frozen... Check if

◇ The thermostat knob is set too cold.

◇ The position of food stored touches the refrigerant power of refrigerator back wall.

Food in the refrigerator compartment is not cold... Check if

◇ The air vents are blocked in the compartment. This prevents the movement of cold air.

◇ The door(s) are opened too often or not closed properly.

◇ A large amount of food has just been added to the refrigerator or freezer compartment.

◇ The position of thermostat knob is adjusted too low.

Melted frost is leaking over the compartments inside or on the floor...

Check if

- ◇The drain – off mouth entrance is blocked.
- ◇Evaporator pan is in place.

The refrigerator seems to make unusual noises ... Check if

- ◇The refrigerator is leveled on the floor.
- ◇The body of the refrigerator touches the wall.
- ◇The drip tray is not placed properly.

There is interior moisture build - up... Check if

- ◇The air vents are blocked in the refrigerator.
- ◇The door is opened often.
- ◇The room is humid.
- ◇The food is not packaged correctly.
- ◇The control is not set correctly.

The doors will not close completely... Check if

- ◇Food packages are blocking the door.
- ◇The shelves are out of position .
- ◇The gaskets are dirty.
- ◇The refrigerator is not level.

REQUESTING ASSISTANCE OR SERVICE

If the problem still cannot be solved after going through the troubleshooting list, contact the PowerPoint Appliances after-sales service by visiting the website www.powerpointappliances.ie

- HOW TO DISPOSE OF THE PACKING MATERIAL

The packing material is recyclable.

The following procedure is recommended:

- dispose of paper, card and carton in the relative containers;
- dispose of plastics in the relative containers.
- If you do not have recycling bins in your area then you can put this material in the ordinary bins and/or take it to the appropriate collection centres.